

CODE	DESCRIPTION	QTY	UNIT
04-52-50001	Differential relays' SIEMENS type 7 UT 5135-4CB01-1AAO	3	ea
04-52-50002	Gasket for tank 5 MVA Transformer 33/11KV	1	Each
04-52-50003	Kilo of Silicagel for Transformer	100	Each
04-52-50004	LV socket for FC4 C.B. fixed + moving part	4	Each
04-52-50005	Kit of tools for cabling sockets with pins	1	Each
04-52-50006	Lamp 60V 20mA	50	Each
04-52-50007	Lamp E14 7W 110V	50	Each
04-52-50008	Voltage indicator lamp for FLUAIR panels	50	Each
04-52-50009	Lamp for indicating position tap changer on aux. Cubicle	50	Each
04-52-50010	Lamp 110/125V 40W B22 for Emergency lighting	20	Each
04-52-50011	Circuit Breaker 12KV 630A 25KA SF6	1	Each
04-52-50012	Closing coil 110VDC for 12KV C.B.	2	Each
04-52-50013	Tripping coil 110VDC for 12KV C.B.	2	Each
04-52-50014	Motor 110VDC for 12KV C.B.	2	Each
04-52-50015	Anti pumping relay for 12KV C.B.	2	Each
04-52-50016	Closing coil 110VDC for 36KV C.B.	2	Each
04-52-50017	Tripping coil 110VDC for 36KV C.B.	2	Each
04-52-50018	Motor 110VDC for 36KV C.B.	2	Each
04-52-50019	Anti pumping relay for 36KV C.B.	2	Each
04-52-50020	Kilo Grease for electrical contact	20	Kg
04-52-50021	Kilo Grease for mecanical parts	20	Kg
04-52-50022	Gasket for tank 5 MVA Transformer 33/11KV	1	Each
04-52-50023	Set of all gaskets on the transformer 5MVA 33/11KV	2	Each
04-52-50024	Circuit Breaker 12KV 630A 25KA SF6	1	Each
04-52-50025	Closing coil 110VDC for 12KV C.B.	2	Each
04-52-50026	Tripping coil 110VDC for 12KV C.B.	2	Each
04-52-50027	Motor 110VDC for 12KV C.B.	2	Each
04-52-50028	Anti pumping relay for 12KV C.B.	2	Each
04-52-50029	Closing coil 110VDC for 36KV C.B.	2	Each
04-52-50030	Tripping coil 110VDC for 36KV C.B.	2	Each
04-52-50031	Motor 110VDC for 36KV C.B.	2	Each
04-52-50032	Anti pumping relay for 36KV C.B.	2	Each
04-52-50033	Lamp 60V 20mA	50	Each
04-52-50034	Lamp E14 7W 110V	50	Each
04-52-50035	Voltage indicator lamp for FLUAIR panels	50	Each
04-52-50036	Lamp for indicating position tap changer on aux. cubicle	50	Each
04-52-50037	Kilo of Silicagel for Transformer	100	Kg
04-52-50038	LV socket for FC4 C.B. fixed + moving part	4	Each
04-52-50039	Kit of tools for cabling sockets with pins	1	Each
04-52-50040	Cell ALCAD Type EPE5.5 (or equivalent) of Cd-Ni battery110V	86	Each
04-52-50041	Set of spares for COREDEL battery charger	1	Each
04-52-50042	Kilo Grease for electrical contact	20	Kg
04-52-50043	Kilo Grease for mecanical parts	20	Kg
04-52-50044	Mvar meter (0-15MVar), 250° NE96 circular base 80 mm dia	1	Each
04-52-50045	Ammeter (0-400A) with maximum indicator 250° NE96	3	Each
04-52-50046	Signal indications C/W lamp and cover:red,green,white,Violet	4	Each
04-52-50047	Covers of tests boxes for metering and protection	3	Each
04-52-50048	Ammeter (0-400 A) 250° NE96 with maximum indicator	1	Each
04-52-50049	Printed circuit with 8 aux. relays included as DWG 1276463	1	Each
04-52-50050	Handle for local - Remote selector switch	1	Each
04-52-50051	Handle for breaker ON-OFF switch (spring return/neutral type)	1	Each
04-52-50052	Handle for selector switch for load shedding	1	Each
04-52-50053	Fault reset push-button	1	Each
04-52-50054	Healthy trip push-button	1	Each

04-52-50055	Signal indications C/W lamp and cover:red,green,white,violet	4	Each
04-52-50056	2A fuse 31,5 x 8,5	6	Each
04-52-50057	Base for fuse	6	Each
04-52-50058	4A fuse 31,5 x 8,5	2	Each
04-52-50059	Base for fuse	2	Each
04-52-50060	110V,5A auxiliary relay with 4NO + 4NC contacts & with base	2	Each
04-52-50061	110V , DC spring charging motor for charging C.B. type F400	1	Each
04-52-50062	Covers of test boxes for metering and protection	3	Each
04-52-50063	Ammeters (0-400A) 250° NE96 with maximum indicator	1	Each
04-52-50064	Current transformer 300/5-5A 5VA 5P10 20VA CL1 (1 Set)	3	Each
04-52-50065	Handle for local - remote selector switch	1	Each
04-52-50066	Breaker ON-OFF switch (spring return to neutral type)	1	Each
04-52-50067	Handle for selector switch for load shedding	1	Each
04-52-50068	Fault reset push-button	1	Each
04-52-50069	Healthy trip push-button	1	Each
04-52-50070	Signal indications C/W lamp and cover:red,green,white,violet	4	Each
04-52-50071	2A fuse 31,5 x 8,5	6	Each
04-52-50072	Base for fuse	6	Each
04-52-50073	4A fuse 31,5 x 8,5	2	Each
04-52-50074	Base for fuse	2	Each
04-52-50075	110 V DC spring charging motor for charging C.B. type F400	1	Each
04-52-50076	Covers of tests boxes for metering and protection	3	Each
04-52-50077	Ammeter (0-400 A) 250° NE96 with maximum indicator	1	Each
04-52-50078	Printed circuit with 8 aux. relays included as DWG 1276463	1	Each
04-52-50079	Handle for local - Remote selector switch	1	Each
04-52-50080	Handle for breaker ON-OFF switch (spring return/neutral type)	1	Each
04-52-50081	Handle for selector switch for load shedding	1	Each
04-52-50082	Fault reset push-button	1	Each
04-52-50083	Healthy trip push-button	1	Each
04-52-50084	Signal indications C/W lamp and cover:red,green,white,violet	4	Each
04-52-50085	2A fuse 31,5 x 8,5	6	Each
04-52-50086	Base for fuse	6	Each
04-52-50087	4A fuse 31,5 x 8,5	2	Each
04-52-50088	Base for fuse	2	Each
04-52-50089	110V,5A auxiliary relay with 4NO + 4NC contacts & with base	2	Each
04-52-50090	110V, DC spring charging motor for charging C/W type F400	1	Each
04-52-50091	Pad lock for closing the door of the Protection cubicle	1	Each
04-52-50092	Ammeter (0-1200 A) 250° NE96 with maximum indicator	1	Each
04-52-50093	Signal indications C/W lamp and cover:red,green,white,violet	4	Each
04-52-50094	2A fuse 31,5 x 8,5	2	Each
04-52-50095	Base for fuse	2	Each
04-52-50096	4A fuse 31,5 x 8,5	2	Each
04-52-50097	Base for fuse	2	Each
04-52-50098	Ammeter (0-400 A) 250° NE96 with maximum indicator	1	Each
04-52-50099	Handle for breaker ON-OFF switch (spring return/neutral type)	1	Each
04-52-50100	Handle for selector switch for load shedding	1	Each
04-52-50101	Fault reset push-button	1	Each
04-52-50102	Healthy trip push-button	1	Each
04-52-50103	Signal indications C/W Lamp and cover:red,green,white,violet	4	Each
04-52-50104	2A fuse 31,5 x 8,5	6	Each
04-52-50105	Base for fuse	6	Each
04-52-50106	4A fuse 31,5 x 8,5	2	Each
04-52-50107	Base for fuse	2	Each
04-52-50108	Covers of test boxes for metering and protection	3	Each
04-52-50109	Ammeter (0-400A) 250° NE96 with maximum indicator	1	Each
04-52-50110	Current transducer IAN1210 or equivalent	1	Each
04-52-50111	Handle for local - remote selector switch	1	Each
04-52-50112	Breaker ON-OFF switch (spring return to neutral type)	1	Each

04-52-50113	Handle for selector switch for load shedding	1 Each
04-52-50114	Fault reset push-button	1 Each
04-52-50115	Healthy trip push-button	1 Each
04-52-50116	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50117	2A fuse 31,5 x 8,5	6 Each
04-52-50118	Base for fuse	6 Each
04-52-50119	4A fuse 31,5 x 8,5	2 Each
04-52-50120	Base for fuse	2 Each
04-52-50121	110VDC 5A auxiliary relay with 4 NO+4NC contacts	2 Each
04-52-50122	Base for aux relay	3 Each
04-52-50123	Voltmeter (0-36kV) 250° NE96 w circular base 80 mm dia	1 Each
04-52-50124	Ammeter (0-2000A) 250° NE96 with maximum indicator	1 Each
04-52-50125	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50126	4A fuse 31,5 x 8,5	3 Each
04-52-50127	Base for fuse	3 Each
04-52-50128	Ammeter (0-400A)250° NE96 with maximum indicator	1 Each
04-52-50129	Handle for breaker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50130	Fault reset push-button	1 Each
04-52-50131	Healthy trip push-button	1 Each
04-52-50132	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50133	2A fuse 31,5 x 8,5	6 Each
04-52-50134	Base for fuse	6 Each
04-52-50135	4A fuse 31,5 x 8,5	2 Each
04-52-50136	Base for fuse	2 Each
04-52-50137	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50138	2A fuse 31,5 x 8,5	2 Each
04-52-50139	Base for fuse	2 Each
04-52-50140	4A fuse 31,5 x 8,5	2 Each
04-52-50141	Base for fuse	2 Each
04-52-50142	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50143	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50144	Ammeter (0-1200A) 250° NE96 with maximum indicator	1 Each
04-52-50145	Covers of test boxes for metering and protection	3 Each
04-52-50146	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50147	Support insulator with connecting busbar link	2 Each
04-52-50148	Handle for local - remote selector switch	1 Each
04-52-50149	Handle for breaker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50150	Handle for selector switch for load shedding	1 Each
04-52-50151	Fault reset push-button	1 Each
04-52-50152	Heavy trip push-button	1 Each
04-52-50153	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50154	2A fuse 31,5 x 8,5	6 Each
04-52-50155	Base for fuse	6 Each
04-52-50156	4A fuse 31,5 x 8,5	2 Each
04-52-50157	Base for fuse	2 Each
04-52-50158	110VDC 5A auxiliary relay with 4NO + 4NC contacts	2 Each
04-52-50159	Base for aux relay	2 Each
04-52-50160	Covers of test boxes for metering and protection	3 Each
04-52-50161	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50162	Handle for local - remote selector switch	1 Each
04-52-50163	Handle for breaker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50164	Fault reset push-button	1 Each
04-52-50165	Healthy trip push-button	1 Each
04-52-50166	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50167	2A fuse 31,5 x 8,5	6 Each
04-52-50168	Base for fuse	6 Each
04-52-50169	4A fuse 31,5 x 8,5	2 Each
04-52-50170	Base for fuse	2 Each

04-52-50171	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	1 Each
04-52-50172	Base for aux relay	1 Each
04-52-50173	Voltmeter (0-36kV) 250° NE96 w circular base 80 mm dia	2 Each
04-52-50174	Ammeter (0-2000A) 250° NE96 with maximum indicator	1 Each
04-52-50175	Active power transducer PAR1232 or equivalent	1 Each
04-52-50176	Reactive power transducer QAR1232 or equivalent	1 Each
04-52-50177	Handle for local - remote selector switch	1 Each
04-52-50178	Handle for braker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50179	Handle for voltmeter selector switch	1 Each
04-52-50180	Fault reset push-button	1 Each
04-52-50181	Healthy trip push-button	1 Each
04-52-50182	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50183	2A fuse 31,5 x 8,5	10 Each
04-52-50184	Base for fuse	10 Each
04-52-50185	4A fuse 31,5 x 8,5	10 Each
04-52-50186	Base for fuse	10 Each
04-52-50187	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50188	Handle for local - remote selector switch	1 Each
04-52-50189	Handle for breaker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50190	Handle for selector switch for load shedding	1 Each
04-52-50191	Fault reset push-button	1 Each
04-52-50192	Healthy trip push-button	1 Each
04-52-50193	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50194	2A fuse 31,5 x 8,5	6 Each
04-52-50195	Base for fuse	6 Each
04-52-50196	4A fuse 31,5 x 8,5	2 Each
04-52-50197	Base for fuse	2 Each
04-52-50198	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	1 Each
04-52-50199	Base for aux relay	1 Each
04-52-50200	Covers of test boxes for metering and protection	4 Each
04-52-50201	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50202	Printed circuit with 8 aux. relays included as DWG 1276463	1 Each
04-52-50203	Handle for local - remote selector switch	1 Each
04-52-50204	Handle for breaker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50205	Fault reset push-button	1 Each
04-52-50206	Healthy trip push-button	1 Each
04-52-50207	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50208	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	2 Each
04-52-50209	Base for aux relay	2 Each
04-52-50210	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50211	Current transducer IAN1210 or equivalent	1 Each
04-52-50212	Printed circuit with 10 aux. relays included as DWG 1276466	1 Each
04-52-50213	Handle for local - remote selector switch	1 Each
04-52-50214	Breaker ON-OFF switch (spring return to neutral tupe)	1 Each
04-52-50215	Handle for selector switch for load shedding	1 Each
04-52-50216	Fault reset push-button	1 Each
04-52-50217	Healthy trip push-button	1 Each
04-52-50218	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50219	2A fuse 31,5 x 8,5	6 Each
04-52-50220	Base for fuse	6 Each
04-52-50221	4A fuse 31,5 x 8,5	2 Each
04-52-50222	Base for fuse	2 Each
04-52-50223	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	2 Each
04-52-50224	Base for aux relay	2 Each
04-52-50225	Ammeter (0-1200A) 250° NE96 with maximum indicator	1 Each
04-52-50226	Handle for local - remote selector switch	1 Each
04-52-50227	Breaker ON-OFF switch (spring return to neutral type)	1 Each
04-52-50228	Fault reset push-button	1 Each

04-52-50229	Healthy trip push-button	1 Each
04-52-50230	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50231	2A fuse 31,5 x 8,5	10 Each
04-52-50232	Base for fuse	10 Each
04-52-50233	4A fuse 31,5 x 8,5	10 Each
04-52-50234	Base for fuse	10 Each
04-52-50235	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	2 Each
04-52-50236	Base for aux relay	2 Each
04-52-50237	Current transformer 1500/5-5A 20VA CL1 / 5VA CL1	1 Each
04-52-50238	Ammeter (0-400A)250° NE96 with maximum indicator	1 Each
04-52-50239	Handle for local - remote selector switch	1 Each
04-52-50240	Handle for breaker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50241	Handle for voltmeter selector switch	1 Each
04-52-50242	Fault reset push-button	1 Each
04-52-50243	Healthy trip push button	1 Each
04-52-50244	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50245	2A fuse 31,5 x 8,5	6 Each
04-52-50246	Base for fuse	6 Each
04-52-50247	4A fuse 31,5 x 8,5	2 Each
04-52-50248	Base for fuse	2 Each
04-52-50249	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	2 Each
04-52-50250	Base for aux relay	2 Each
04-52-50251	Covers of test boxes for metering and protection	3 Each
04-52-50252	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50253	Handle for local - remote selector switch	1 Each
04-52-50254	Breaker ON-OFF switch (spring return to neutre type)	1 Each
04-52-50255	Handle for selector switch for load shedding	1 Each
04-52-50256	Fault reset push-button	1 Each
04-52-50257	Healthy trip push button	1 Each
04-52-50258	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50259	2A fuse 31,5 x 8,5	6 Each
04-52-50260	Base for fuse	6 Each
04-52-50261	4A fuse 31,5 x 8,5	2 Each
04-52-50262	Base for fuse	2 Each
04-52-50263	110V,DC spring charging motor for charging C.B. type F400	1 Each
04-52-50264	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	2 Each
04-52-50265	Base for aux relay	2 Each
04-52-50266	MVAr meter (0-15MVar) 250° NE96 circular base, 80 mm dia	1 Each
04-52-50267	Ammeter (0-400A) 250° NE96 with maximum indicator	3 Each
04-52-50268	Handle for breaker ON-OFF switch (spring return/neutral type)	1 Each
04-52-50269	Signal indications C/W lamp and cover:red,green,white,violet	4 Each
04-52-50270	Fault reset push-button	1 Each
04-52-50271	Healthy trip push button	1 Each
04-52-50272	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50273	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50274	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50275	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50276	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50277	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50278	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50279	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50280	Voltmeter (0-12kV) 250° NE96 circular base 80 mm dia	1 Each
04-52-50281	Ammeter (0-1200A) 250° NE96 with maximum indicator	1 Each
04-52-50282	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50283	Earth fault indicting lamps (yellow) C/W lamp and cover	3 Each
04-52-50284	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50285	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50286	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each

04-52-50287	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50288	Earth fault alarm relay (59N) BVHR or equivalent	1 Each
04-52-50289	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50290	Voltmeter (0-12kV) 250° NE96, circular base 80 mm dia	1 Each
04-52-50291	Ammeter (0-2000A) 250° NE96 with maximum indicator	1 Each
04-52-50292	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50293	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	1 Each
04-52-50294	Base for aux relay	1 Each
04-52-50295	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50296	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50297	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50298	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50299	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50300	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50301	Pad lock for closing the door of the Protection cubicle	1 Each
04-52-50302	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50303	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50304	Voltmeter (0-12kV) 250° NE96, circular base 80 mm dia	1 Each
04-52-50305	Earth fault alarm relay (59N) BVH or equivalent	1 Each
04-52-50306	Ammeter (0-1200A) 250° NE96 with maximum indicator	1 Each
04-52-50307	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50308	Earth fault indicating lamps (yellow) C/W lamp and cover	3 Each
04-52-50309	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50310	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50311	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50312	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50313	Pad lock for closing the door of the protection cubicle	1 Each
04-52-50314	Pad lock for closing the door of the protection cubicle	1 Each
04-52-50315	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50316	Voltmeter (0-12kV) 250° NE96, circular base 80 mm dia	2 Each
04-52-50317	Ammeter (0-2000A) 250° NE96 with maximum indicator	1 Each
04-52-50318	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50319	11kV Fuse 0,3A	3 Each
04-52-50320	4A fuse 31,5 x 8,5	4 Each
04-52-50321	Base for fuse	4 Each
04-52-50322	Voltmeter selector switch	2 Each
04-52-50323	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50324	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50325	Current transducer IAN1210 or equivalent	1 Each
04-52-50326	Covers of test boxes for metering and protection	3 Each
04-52-50327	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50328	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50329	Handle for local - remote selector switch	1 Each
04-52-50330	Breaker ON-OFF switch (spring return to neutral type)	1 Each
04-52-50331	Fault reset push-button	1 Each
04-52-50332	2A fuse 31,5 x 8,5	8 Each
04-52-50333	Base for fuse	8 Each
04-52-50334	4A fuse 31,5 x 8,5	2 Each
04-52-50335	Base for fuse	2 Each
04-52-50336	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	1 Each
04-52-50337	Base for aux relay	1 Each
04-52-50338	Test boxes for metering and protection	3 Each
04-52-50339	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50340	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50341	Handle for local - remote selector switch	1 Each
04-52-50342	Breaker ON-OFF switch (spring return to neutral type)	1 Each
04-52-50343	Selector switch for load shedding	1 Each
04-52-50344	Fault reset push-button	1 Each

04-52-50345	Healthy trip push-button	1 Each
04-52-50346	2A fuse 31,5 x 8,5	8 Each
04-52-50347	Base for fuse	8 Each
04-52-50348	4A fuse 31,5 x 8,5	2 Each
04-52-50349	Base for fuse	2 Each
04-52-50350	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	1 Each
04-52-50351	Base for aux relay	1 Each
04-52-50352	Test boxes for metering and protection	3 Each
04-52-50353	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50354	Printed circuit with 8 aux. relays included as DWG 1276463	1 Each
04-52-50355	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50356	Handle for local - remote selector switch	1 Each
04-52-50357	Breaker ON-OFF switch (spring return to neutral type)	1 Each
04-52-50358	Handle for selector switch for load shedding	1 Each
04-52-50359	Fault reset push-button	1 Each
04-52-50360	Healthy trip push-button	1 Each
04-52-50361	2A fuse 31,5 x 8,5	8 Each
04-52-50362	Base for fuse	8 Each
04-52-50363	4A fuse 31,5 x 8,5	2 Each
04-52-50364	Base for fuse	2 Each
04-52-50365	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	1 Each
04-52-50366	Base for aux relay	1 Each
04-52-50367	Voltmeter (0-12kV) 250° NE96, circular base 80 mm dia	1 Each
04-52-50368	Earth fault alarm relay (59N) BVH or equivalent	1 Each
04-52-50369	11kV fuse 0,3A	3 Each
04-52-50370	Covers for test boxes for metering and protection	3 Each
04-52-50371	Ammeter (0-1200A) 250° NE96 with maximum indicator	1 Each
04-52-50372	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50373	Earth fault indicating lamps (yellow) C/W lamp and cover	3 Each
04-52-50374	Local - remote selector switch	1 Each
04-52-50375	Breaker ON-OFF switch (spring return to neutral type)	1 Each
04-52-50376	Voltmeter selector switch	1 Each
04-52-50377	2A fuse 31,5 x 8,5	12 Each
04-52-50378	Base for fuse	12 Each
04-52-50379	4A fuse 31,5 x 8,5	6 Each
04-52-50380	Base for fuse	6 Each
04-52-50381	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	5 Each
04-52-50382	Base for aux relay	5 Each
04-52-50383	Current transducer IAN1210 or equivalent	1 Each
04-52-50384	Test boxes for metering and protection	3 Each
04-52-50385	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50386	Printed circuit with 8 aux. relays included as DWG 1276463	1 Each
04-52-50387	Current transformers 300/5/5/5A, CI.1.,CI 5P10 & CI X.-1 Set	3 Each
04-52-50388	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50389	Handle for local - remote selector switch	1 Each
04-52-50390	Breaker ON-OFF switch (spring return to neutral type)	1 Each
04-52-50391	Handle for selector switch for load shedding	1 Each
04-52-50392	Fault reset push-button	1 Each
04-52-50393	Healthy trip push-button	1 Each
04-52-50394	2A fuse 31,5 x 8,5	8 Each
04-52-50395	Base for fuse	8 Each
04-52-50396	4A fuse 31,5 x 8,5	2 Each
04-52-50397	Base for fuse	2 Each
04-52-50398	110VDC 5A auxiliary relay with 4N0 + 4NC contacts	1 Each
04-52-50399	Base for aux relay	1 Each
04-52-50400	Test boxes for metering and protection	3 Each
04-52-50401	Ammeter (0-400A) 250° NE96 with maximum indicator	1 Each
04-52-50402	Printed circuit with 8 aux. relays included as DWG 1276463	1 Each

04-52-50403	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50404	Handle for local - remote selector switch	1 Each
04-52-50405	Breaker ON-OFF switch (spring return to neutral type)	1 Each
04-52-50406	Handle for selector switch for load shedding	1 Each
04-52-50407	Fault reset push-button	3 Each
04-52-50408	Healthy trip push-button	1 Each
04-52-50409	2A fuse 31,5 x 8,5	8 Each
04-52-50410	Base for fuse	8 Each
04-52-50411	4A fuse 31,5 x 8,5	2 Each
04-52-50412	Base for fuse	2 Each
04-52-50413	110VDC 5A auxiliary relay with 4NO + 4NC contacts	2 Each
04-52-50414	Base for aux relay	2 Each
04-52-50415	Signal indications C/W lamp and cover:red,green,white,violet	3 Each
04-52-50416	Fault reset push-button	1 Each
04-52-50417	Healthy trip push-button	1 Each
04-52-50418	2A fuse 31,5 x 8,5	8 Each
04-52-50419	Base for fuse	8 Each
04-52-50420	4A fuse 31,5 x 8,5	2 Each
04-52-50421	Base for fuse	2 Each
04-52-50422	Handle for earth switch	1 Each
04-52-50423	Mechanism of circuit-breaker 36KV 1250A 25KA SF6 (F400)	2 Each
04-52-50424	C.-breaker 12KV 1250A 25KA SF6	3 Each
04-52-50425	Closing coil 110V DC for 36kv C.B. SF6 (f400)	12 Each
04-52-50426	Tripping coil 110 V DC for 36KV C.B. SF6 (F400)	12 Each
04-52-50427	Motor 110 VDC for 36KV C.B. SF6 (F400)	5 Each
04-52-50428	Set of 10 Printed circuit with aux. relays	1 Each
04-52-50429	36kV Current Trans.600-300/5-5-5A 20VA CL1/5VA 5P10/CLX,3 Sets	9 Each
04-52-50430	36kV Current Trans.1200/5-5-5A 20VA CL1/5VA 5P10/CL X	3 Each
04-52-50431	Closing coil 110V DC for 12kV C.B. SF6 (F200)	12 Each
04-52-50432	Tripping coil 110V DC for 12KV C.B. SF6 (F200)	12 Each
04-52-50433	Motor 110V DC for 12 kV C.B. SF6 (F200)	5 Each
04-52-50434	12kV current transformer 300/5-5A 20VA CL1 / 5VA 5P10	9 Each
04-52-50435	12kV current transformer 1500/5-5-5A 20VA CL1/5VA 5P10/CL X	3 Each
04-52-50436	LV fuse 2A (type 31.5 x 8.5)	300 Each
04-52-50437	LV fuse 4A (type 31.5 x 8.5)	200 Each
04-52-50438	Potential transformer 11kV/v3/110v+D818 300VA, cl. 1.0)	6 Each
04-52-50439	Complete VT compartment,11kV/v3/110v3/110/3V,2 Sets of 2VT'S	4 Each
04-52-50440	Ammeter thermal with max. indicator (0-6.5)A (0-400A) range	10 Each
04-52-50441	0-36kV meter for 33kV (type NE 96) 250°	3 Each
04-52-50442	0-12kV meter for 11kV (type NE 96) 250°	3 Each
04-52-50443	(S7) selector switch (local - remote)	15 Each
04-52-50444	(S8) selector switch (ON - 0 - OFF)	15 Each
04-52-50445	(S9) selector switch for load shedding (1st-2nd stage)	15 Each
04-52-50446	Support insulator with connecting busbar link for F400	10 Each
04-52-50447	Support insulator with connecting busbar link for F200	10 Each
04-52-50448	Healthy trip push button	25 Each
04-52-50449	Fault reset push-button	25 Each
04-52-50450	HV fuse (type 6,3A) for 33kv	60 Each
04-52-50451	HV fuse (type 0,3A) for 11KV	60 Each
04-52-50452	Indicating lamps for H 1, 2, 4, 8 (red, green white, yellow)	250 Each
04-52-50453	Indicating lamps60 V.AC for H5,6,7 (yellow)	50 Each
04-52-50454	Bottle of 40 Kilo Gas SF6 for C.B. 33 and 11kV	6 Each
04-52-50455	Kilo Grease for electrical contact	10 Kg
04-52-50456	Kilo Grease for mecanical mecanical	10 Kg
04-52-50457	Tyres	5 Each